

BIG BUTTON REMOTE CONTROL GUIDE

TV POWER

Turn off/on TV

MENU

Displays the menu

GUIDE

Opens the Program Guide

ARROW KEYS AND OK/SEL

Navigate and select menu and guide choices

EXIT

Exit the current screen

RED, GREEN, YELLOW, BLUE

Access additional features on set-top box

VOLUME UP AND DOWN

Raise or lower the volume

MUTE

Turn the sound off or on

NUMBER KEYS (0-9)

Directly select a channel or enter options

INPUT

In TV control mode, will change the input of the device you are controlling

SETUP

Hold for 3 seconds to enter programming

CABLE POWER

Turn on/off cable box

INFO

Display current channel and Program information

FAV

View your favorite channels

ON DEMAND

Access video on demand services

CHANNEL UP AND DOWN

Changes to the next higher or lower channel

LAST

Recall the last channel you were watching

REW, PLAY, FFWD, STOP, PAUSE, REC

Controls playback of live and recorded TV

CC

Turns on/off Closed Captioning



**If Available*

SEE WHAT'S ON

There are multiple ways to see what is showing on your TV.

INFO BUTTON: Press **Info** and you will see the name and a description of the current program at the top of the screen.

OK BUTTON: Press **OK** to show the 'Now Playing' bar and you will see what program is currently playing.

GUIDE BUTTON: Press **Guide** to see the most comprehensive view of what's on. Go ahead and arrow through...
...You're bound to find something to watch.

BROWSE BUTTON: Press **Browse** (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.

PROGRAMMING YOUR SET TOP BOX

Press and hold the **SETUP** button at the same time as the corresponding **COLORED BUTTON**, listed below, until the **CABLE POWER** button blinks twice. Set up is now complete.

YELLOW (A): Legacy Amino

BLUE (B): IS-5112SW

RED (C): ADB

GREEN (D): Entone/Amino

***NOTE:** The model of your set top box can be found on label, typically located on the bottom of the box. If you are unable to locate the label, and are still unsure of the model, contact our support team at 888.404.4940. We would be happy to help you.

PROGRAMMING YOUR REMOTE

METHOD A:

1. Press and hold **SETUP** button until LED blinks twice.
2. Press the **TV POWER** button.
3. Press and hold the **DIGIT KEY** for your TV brand.

DIGIT	TV BRAND
1	Insignia/Dynex
2	LG/Zenith
3	Mitsubishi
4	Panasonic
5	Philips/Magnavox
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

4. Let go of the key when your TV turns off. Setup is complete. 2 Blinks = success 1 Long Blink = failure

METHOD B:

1. Press and hold **SETUP** button until LED blinks twice.
2. Press the **TV POWER** button.
3. Press and hold down the **OK/SELECT** button.
4. Let go of the **OK/SELECT** button when the TV turns off.

If you are experiencing difficulty
setting up your remote, please visit:
www.urcsupport.com/urc_product/royal-urc2060b0