

REMOTE CONTROL GUIDE

TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

Setup

Use for programming sequences of devices controlled by the remote.

Skip Forward, Skip Back, Rewind, Play, Fast Forward, Stop, Pause, Record

In STB mode, these buttons control the DVR functions. In other modes, these buttons control a VCR, DVD Player or PVR.

Menu

Displays the menu.

Guide

Opens the Interactive Program Guide.

Day +/-

Jump ahead/back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue

Access additional features on your set top box.

Vol +/-

Raise or lower the volume.

Mute

Turn the sound off or on.

Aspect Ratio *

Temporarily change the conversion mode from Original Size to Fit to Screen.

Input

Change the input of the device you are controlling when in TV control mode.

Power

Turn on/off a selected device.

Live

Return to watching live TV.

List

Display a list of recorded, future and series rules on your DVR.

Info

Display the current channel and program information. Press again for more detail.

Browse, Search, Arrow and OK

Navigate and select on-screen choices.

Exit

Exit current screen.

Page +/-

Page up/down in lists and Interactive Program Guide.

Channel +/-

Change channel, up/down.

On Demand

Access video-on-demand services.

Last

Recall the last channel viewed.

FAV

View your favorite channels.

CLOSED CAPTIONING

Turn closed captioning on/off.

Number Keys (0-9)

Directly select a channel or enter options.

**If Available*

SEE WHAT'S ON

There are multiple ways to see what is showing on your TV.

INFO BUTTON: Press **Info** and you will see the name and Description of the current program at the top of the screen.

OK BUTTON: Press **OK** to show the 'Now Playing' bar and you will see what program is currently playing.

GUIDE BUTTON: Press **Guide** to see the most comprehensive view of what's on. Go ahead and page through...you're bound to find something to watch.

BROWSE BUTTON: Press **Browse** (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.

PARENTAL CONTROLS:

There are several ways to use Parental Controls. Follow these steps to get to the Controls menu.

1. From the Main Menu, select **Settings**.
2. Arrow to the right, highlight **Parental**.
3. Press the **OK** button.

CHANGE PIN:

Select the **Change PIN** category to enter your new PIN and confirm it. Until you change it, the default PIN is 0000.

EDIT LOCKED CHANNELS:

You can lock entire channels via the **Edit Locked** category so that it requires a PIN to view programming. You may prevent locked channels from showing in the channel guide via the **Parental Control Options** (*locked channels would still be accessible using the number keys and entering a PIN*).

SET PROGRAM RATING LIMITS:

To control the types of programming that can be viewed, you may set program limits based on motion-picture ratings (G, PG, R, etc.) or TV ratings (TV-G, TV-14, etc.) using the **Set Ratings** category. If you attempt to tune to a channel that is airing a program with a rating at or above your rating limit, you must enter a PIN to view the program.

SET TIME RESTRICTIONS:

The **Time Restrictions** category allows you to set time periods per day where television access requires a PIN. Select the **Green button** to Add Restriction under the Time Restrictions category.

CANCEL OVERRIDE:

Cancel Override category allows any previous PIN overrides for an extended period of time to be cancelled. Once the override has been cancelled, the parental PIN will need to be used for all Locked and Rated channels.

FAVORITES:

CREATE FAVORITE LISTS:

There are 12 pre-defined favorite lists and you may create up to 5 additional Favorites Lists.

1. Press **Menu**. Arrow down to **SETTINGS** and then arrow right to **Edit Favorites**. Press **OK**.
2. With your Favorite List highlighted, arrow down to move the channel list. Channels included in the Favorite List are marked with a "P." Using the Arrow buttons, move through the channels and press **OK** to add or remove a channel to your Favorite List. Or, type in a channel using the number keys.
3. When done, press the **blue button** to save your changes.

USING FAVORITE LISTS:

1. Press the **FAV** button. By default, your list is 'All' channels.
2. Arrow up/down to choose a Favorite list. Press **OK** with a Favorite List selected. You will be in Favorites mode using that list.
3. Use either the Channel Up/Down button or the Arrow buttons to move between channels in a list. Or, use the number keys to select a channel. The Info Bar shows the name of the active favorite list.
4. To leave a Favorite mode, press **FAV**. Arrow up/down to select 'All' and press **OK**.

REMINDERS:

SET REMINDERS: While viewing the guide, highlight the program where you want a reminder and press **OK**.